



©2014 Entone, Inc. Entone, Nova and connecting the home are trademarks of Entone, Inc. Other company, product, and service names may be trademarks or service marks of others. All information contained in this document is subject to change without notice. Information contained in this document is provided on an as is basis. In no event will Entone be liable for damages arising directly or indirectly from any use of the information contained in this document. Subject to change without notice.

NOVA

Remote Control Guide (US)



PROGRAM REMOTE TO CONTROL YOUR DEVICES

You can program the Nova to control other devices by

1. Locate the device code for your device in the Device Codes table provided in the Appendix starting on page 11. If you cannot find the device code for your device or it does not work after trying the listed device codes for your device brand, then you can try the auto search on page 7.
2. Turn on your device.
3. On the remote control, press the Device Control key (TV / STB / DVD / AUX) to choose the device mode.
4. Press and hold the "SETUP" key until the LED blinks twice.
5. Enter the five-digit device code for your device. If you perform this procedure correctly, the LED will blink twice. Otherwise, it has a long blink.
6. Press "Power" key. If your device turns off, setup is complete.
7. If your device does not turn off, repeat this procedure using the next code for your device brand.

Record working codes here

TV code	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
DVD code	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
AUX code	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>

AUTO SEARCH PROCEDURES

If your device does not respond to the remote control after trying all device codes listed for your brand, or if your brand is not listed, try searching for your device code as follows:

1. Turn on your device.
2. On the remote control, press the corresponding Device Control key (TV / DVD / AUX) to choose the device mode.
3. Press and hold "SETUP" key until the LED blinks twice.
4. Press number keys "9" - "9" - "1".
5. Press "Power" key.
6. Press "CH +" key repeatedly until your device turns off.
7. Press and hold "SETUP" key until LED blinks twice to save the working code.

APPENDIX TROUBLESHOOTING

Problem	Solution
The LED does not blink when a key is pressed	Replace the batteries with two (2) new AA batteries
LED blinks when key is pressed but TV or STB does not respond	Make sure you are aiming the remote control at your device and that you are within 25 feet of the device you are trying to control
The remote control does not control TV functions	Follow "Controlling your tv" on page 5 to program the remote to control your TV
The LED blinks 5 times with each key press	The batteries need replacement. Replace the batteries

DEVICE CODES

Your Nova Remote Control can control many brands and models of devices. The following pages list device codes for many brands of devices. Many brands list more than one code, and you may need to test several codes to find the best match for your devices. Your devices may be supported even if your brand is not shown in the list below. If you cannot locate your brand, or none of the listed device codes works, then you may still use the "Auto Search Procedures" on page 7 to try to locate a suitable device code.

AUDIO - AMPLIFIER	LG	33217, 33996	Carver	30189, 30121, 31189
Denon	32706, 32134	Martin Logan	33526	
Durabrand	31568	Onkyo	33984, 33992	Coby
Halcro	31934	Panasonic	33323, 33409	31389, 32748, 33218
Harman/Kardon	30892, 33045	Philips	33962, 32675, 33282, 34012	Curtis
Left Coast	30892	Pinnacle	33774, 33728	31389
Marantz	32138, 30892, 31892	Speakers		Denon
Memorex	31568	Pioneer	33956	32857, 31360, 32516, 33347, 32820, 32279
Optimus	30823	Polk Audio	33429	Dynex
Parasound	31934	Proficient	33661	32971
Philips	30892	RCA	33969	Epworth
Pioneer	30823	Samsung	32660, 32609	30121, 31641, 30158, 30189
Polk Audio	30892	Sharp	33736, 33097	Gateway
RCA	30823	Sonos	33919	31517
Regent	31568	Sony	33700, 32610	GE
Sony	33903	SpeakerCraft	33661	33297
AUDIO - ACCESSORY		Toshiba	33627	General Electric
Apple	31115	VIZIO	32454	33297
AudioSource	33721	Yamaha	32458, 32021, 33153, 33917	Harman/Kardon
B & W	33943	ZVOX	32332, 33913, 32334	32241, 31304, 32443, 33418, 30189, 32670
Bose	33708			insignia
Boston	33698			32175, 31030, 32169, 32472, 32929, 32966, 33210, 31077
Acoustics		AUDIO - RECEIVER		Integra
Bowers & Wilkins	33943	Aiwa	30121, 31641, 30158, 30189	31805, 32730, 31320, 32503, 30135, 31298
Curtis	33942	Alco	31390	JBL
Definitive Technology	33645	AMC	31077	32241
Denon	32502	Anthem	33294	Jensen
Dynavox	33231	Anthem	33294	31389
Haier	33516	Statement		JVC
Harman/Kardon	33517	Arcam	31189, 30189	31676, 32040, 31374, 32331, 32239, 31871, 33115, 33274
iLive	33175	Audiotronic	31189	Kenwood
Insignia	33951	Audiovox	31390	31570, 31313, 30186, 31293
JBL	33756, 33535	Bose	31933, 31629, 33959	KLH
JVC	33049			31390
Klipsch	33915			LG
				32197, 32676, 32284, 33285, 31293
				Linn
				30189

Magnavox	30189, 31189, 31831	Thorens	31189	Aventura	00171		01909, 00672,	Gateway	01755, 01756		01564, 01326,
		Toshiba	31788, 31123	Baysonic	00180		00154	GE	00451, 01547,		02002, 01423,
Marantz	31289, 32114, 30189, 31189	Venturer	31390	Bell & Howell	00154	Daytek	02241		01447, 01347,		01892, 01517,
		Vtrek	32426	BGH	04029, 00898,	Dell	01403, 01863,		00051, 00178,		00171, 00463,
McIntosh	31289	Wards	30158, 30189		04070, 02414,		01264		00765		01385, 01660,
Micromega	31189	Yamaha	32061, 32467,		00876, 03485,	Denon	00145	General	00451, 01547,		01963, 02184,
Myryad	31189		33030, 30176,		04028, 04030	Digital	01765	Electric	01447, 01347,		02416, 02751,
Nakamichi	31313		31276, 30376,	Blue Sky	02153, 03997	Lifestyles			00051, 00178,		03227
Norcent	31389		33580, 31815,	Bradford	00180	Disney	01892, 01665		00765	Inteq	00017
Nova	31389		31376, 30186	Briãnia	02414	Dukane	01398	GFM	00171, 01665,	iRIS	02189
Onkyo	31805, 31320,	Zenith	31293, 32197	Broksonic	00463, 01935,	Dumont	00017		01963, 01886,	IRT	00451, 01661
	32730, 32503,				01938, 01892	Durabrand	00463, 00171,		01864, 01865	iSymphony	03429, 03382,
	30135, 31298				03782, 04091,		01570, 01665,	Gibraltar	00017		03118, 03094,
Optimus	31023, 30186	TELEVISION		CCE	00623, 04092		00178, 00180	GoldStar	00178		03863
Panasonic	32967, 31275,	888	04159	Celera	00765	Dynex	02049, 01463,	GPX	03980, 03977,	JC Penney	01347, 00051,
	31288, 31633,	Acer	01339, 04143	Champion	01362		02184		03196		00178, 00156
	32452, 33055,	Admiral	04111, 00093,	Changhong	03814, 00765	Electrograph	01755, 01623	Gradiente	01369, 01029	JCM	02189, 02256
	33309, 31763,		00463	Cineral	00451	Electrohome	00463, 01570,	Grundig	00672	Jensen	01326, 03204,
	32745, 32105,	Advent	00761, 01570	Citizen	01935		01670	Grunpy	00180		00761
Philco	31308, 31676	Affinity	03717, 03716,	Clarion	00180	Electron	02466, 02855	Haier	01749, 02309,	JVC	01774, 01601
Philips	31390, 31831		03870, 03577	Claris	03807	Elektra	00017, 01661		01748, 03382,		02321, 02271
	30189, 32459,	Aiwa	01362	Coby	03478, 03627,	Element	03559, 01687,		01753, 03429,		01253, 00053,
	31831, 32289,	Akai	00702, 01675,		02315, 02344,		02183, 02964,		02293, 02876,		03650, 00463,
	31266, 32311,		00812, 01385,		02306, 02314,		01886		03987, 04120,		01670, 03841,
	31189		00672, 01935,		02345, 01634,	Elite	03867		01570, 03204		04070, 02264,
Pioneer	31123, 31935,		00765		02338, 02326,	Emerson	01864, 01394,	Hallmark	00178		00650, 01892
	31384, 32432,	Alfide	00672		02340, 03629,		03623, 00171,	Hannspree	01348, 02786,	KC	04182
	31023, 32612	America	04179		01538, 02347,		00463, 01963,		01351	KDS	01498, 01687
Polk Audio	31289, 30189	America Action	00180		02348, 03202		00180, 01913,	Harvard	00180	KEC	00180
Proscan	31254	Anam	00180	Commercial	01447		01886, 00178,	Havermy	00093	Ken Brown	04056, 04099
RCA	31254, 32041,	AOC	01589, 03720,	Solutions			01944, 00623,	H-Buster	03620, 03419	Kioto	00785
	32611, 32426,		01365, 02014,	Contec	00180		01661, 01665,	Helios	00865	KLH	00765
	33297, 32655,		04170, 02087,	Contex	04053		02183, 00451,	Hello Kitty	00451	Kolin	01240
	31123, 31390,		02402, 01590,	Continental	01682, 03321,		01909, 00154,	Hewlett	01642	Konka	01939, 01385
	32719, 33281,		02479, 02621,		04179		03559	Packard		Kreisen	00876
	31023		04184, 04185,	Continental	03322, 03321	Emprex	01765	Himitsu	04179, 00180	KTV	00180
Samsung	31868, 32809,		03707, 04101,	Electric		Encross	00876	Hisense	03519, 02183,	Legend	02397, 02309
	33154, 32137,		04169, 04173	Coradir	02844	Envision	01589, 01365,		01660, 02098,	Lexus	03638
	31500, 31304	Aomni	01623	Craig	00180, 03423		02087, 02014,		01314, 00748,	LG	02731, 01423,
Sansui	30189	Apex Digital	00765, 02397,	Crown	00180, 00672		02621		03382, 04029		01859, 02358,
Sharp	30186		00748, 01217,	Crown Mustang	00672, 00898	Epson	01122	Hitachi	01643, 03644,		00178, 03941,
Sherwood	31077, 31905,		00890	Curtis	03577, 02855,	Epworth	01362		00145, 01145,		03397, 04017,
	31517, 32169,	Ario	02397		03121, 02466,	EQD	02014, 02087,		01345, 03639,		02424, 01265,
	33120	Astar	01738, 01531		02352, 03895,		02277		02433, 03697,		03979, 01753,
Sherwood	32169	Asus	03340		02397, 03939,	EQD Auria	02014, 02087,		00679, 02215,		02612, 00017
Newcastle		Atvio	03638, 03636,		01326, 03636,		02277		02981	LodgingStar	03147
Sony	31622, 31759,		03653		04035, 01314,	ESA	00812, 00171,	Hitech	01682, 01814,	LXI	00154, 00156,
	30158, 32172,	Audinac	00180		02559, 03228,		01944, 01963		04179, 04183		00178, 00017,
	31758, 31822,	Audiovox	02413, 00875,		03382	Fair Mate	01326	Hiteker	03118		01347
	32475, 31058,		01865, 00180,	Curtis Mathes	00451, 00702,	Favi	03382	HP	01642	MAG	01687, 01498
	32522, 32860,		01564, 01868,		01661, 00093,	Fisher	00154, 01362	Hyundai	03418, 01814	Magnasonic	01913
	33257, 33372,		01276, 01766,		00145, 00154,	Fluid	02964	iLo	01665, 01684,	Magnavox	01866, 03623,
	33456		01769, 02121,		01347	Frigidaire	02231		01990, 01463,		02372, 02597,
Stereophonics	31023		03065, 00451,	CXC	00180	Funai	01864, 00171,		01286, 01394		01454, 01913,
Sunfire	31313		00623	Cytron	01326		00180, 01271,	Imperial	04183		01944, 01963,
Teac	31390	Auria	02087, 02014,	Daewoo	01661, 00623,		01394, 01963	Initial	01990		01455, 01990,
Technics	31308, 31633		02277		00451, 00661,	Futuretech	00180	Insignia	02049, 01641,		03708, 00171,

Akai 01675, 01935
 America Action 00180
 AOC 04173
 Apex Digital 00765
 Astar 01531
 Audiovox 01865, 02413, 00180, 01766, 01769, 03065, 01868
 Blue Sky 02153
 Broksonic 00463, 01935, 01938
 Citizen 01935
 Coby 02315, 02344, 03627, 02340, 01538, 02347, 03202, 02314
 Continental 03321
 Electric
 Coradir 02844
 Curtis 02855, 03895, 02466, 04035, 02559, 03636
 Daewoo 01909
 Durabrand 00463, 00171
 Dynex 02049, 02184
 Electrohome 01670
 Element 02964
 Emerson 01886, 01864, 01963, 01913, 00463, 01944, 01394, 01909, 00171
 ESA 01944, 01963
 Favi 03382
 Funai 00171, 01394, 01963
 GE 00051
 General Electric 00051
 GFM 01963
 GoldStar 00178
 GPX 03980, 03977, 03196
 Haier 01753, 02309, 03429, 01749, 01748
 Hisense 03519
 Hitachi 03644
 iLo 01990
 Initial 01990
 Insignia 02049, 01641, 01963, 02002, 02416, 02751, 03227, 01326, 01517, 01892
 iSymphony 03429, 03094

JVC 02271, 01601, 01670, 01774, 01253
 Ken Brown 04099
 Konka 01939
 LG 02731, 01423
 LXI 00154
 Magnasonic 01913
 Magnavox 02597, 01913, 01963, 01944, 02372, 01866, 03708, 01454, 00051, 01990
 Memorex 01938, 00463, 01670, 01924, 01927
 Mintek 01990
 Mitsubishi Electric 00093, 00150, 00178
 Naxa 02104, 03382
 Nikko 00154
 Nimbro 02104
 Nordmende 03835
 Optimus 01927, 01913, 01924
 Orion 01938, 01463
 Panasonic 01927, 01947, 01924, 01941, 00250, 01291, 01636, 01480, 00051, 00093, 00178, 03825
 Philips 01963
 Philips 02597, 01394, 01455, 02372
 Polaroid 01769, 01523, 01538, 03942, 01766, 04074, 02002
 Prima 01753
 Proscan 02256, 03895, 03429, 03636
 Pyle 02196
 QuantumFX 02337
 Quasar 00051, 01927, 01924, 00250
 RCA 04214, 02187, 02746, 02932, 02247, 00093, 01868, 02002, 03382, 00051, 01447
 Samsung 02051
 Sansui 01670, 01935, 03564, 01938, 03377
 Sanyo 03488

VIDEO - VCR
 Humax 20739
 Philips 20739
 TiVo 20739

VIDEO - DVD
 Accurian 20675, 21416
 Alco 20790
 Allegro 20869
 Amvox 22840
 Apex Digital 20672, 20717
 Asahi 22615
 Audio Authority 22555
 Audiovox 20790, 20717
 BBK 21224
 Bel Canto 21571
 Design 20717
 Blaupunkt 21224
 BuBuGao 21224
 California Audio Labs 20490
 Cinea 20831
 CineVision 20833, 20869
 Coby 22494, 22746, 21351, 20672
 Cougar 22693

Craig 20831
 Curtis 22235, 23052
 Curtis Mathes 22331, 23925
 Daewoo 20833, 21169, 20869
 Days 22857
 Denon 22258, 22748, 20490
 DigitalMax 21738
 Diplomat 22814
 Directed Video 20717
 Disney 20675, 21270
 Durabrand 23464
 Dynex 22596
 EletroVision 22822
 Emerson 20675, 22213
 Fisher 20670
 Funai 20675
 Gateway 21158
 GE 20717, 20522
 General Electric 20717, 20522
 GFM 20675
 Go Video 20869, 21044, 20741, 21075, 20744, 20833, 21158, 20717
 GoldStar 20741, 20869
 GPX 22235
 Greenhill 20717
 Grundig 20539
 Harman/Kardon 20702, 20582, 21229, 22927, 23228

Hello Kitty 20831
 Hitachi 20664, 20573
 Hiteker 20672
 Initial 20717
 Insignia 22596, 22095, 22428, 20675, 21013, 20741
 Integra Irradio 22147, 21769
 JBL 20646
 JVC 20702
 JVC 22365, 22855, 20623, 21164, 20867, 21602

Kawasaki 20790
 Kenwood 20534, 20490
 KLH 20717, 20790
 Konik 22691
 Lenoxx 22213
 Lexicon 22545
 LG 21602, 20741, 20869, 22135
 LiteOn 21738, 21158, 21416

Logitech 22639
 Magnavox 20675, 21354, 20503, 20646, 23488, 21506, 20539
 Marantz 22481, 20539, 22414, 23444
 McIntosh 21273
 Memorex 22213, 20831, 23153, 21270, 22331
 Microsoft 22083, 22627, 20522
 Mintek 20717
 NAD 20741
 Naxa 22235
 Nesa 20717
 New Acoustic Dimension 20741
 NKS 22834
 Ölevia 22331
 Onkyo 22147, 21627, 20503, 21769
 Oppo 22545, 21224
 Panasonic 21641, 23641, 20490, 21579, 20703, 20503
 Philco 20675, 20790
 Philips 22056, 22434, 20646, 21354, 20539, 21506, 23488, 20503, 22084, 20675, 21158

Pioneer 22442, 22854, 21571, 20142, 20631
 Polaroid 21013
 Polk Audio 20539
 Presidian 20675, 21738
 Proceed 20672
 Proscan 20522
 RCA 20522, 21013, 22919, 22587, 22213, 20717, 22871, 21769, 23464, 20790

RE-BL 22555
 Rio 20869
 Rotel 20623
 Samsung 20199, 20573, 22069, 21075, 21573, 21470, 22113, 22269, 22369, 22329, 22489, 21044, 22843, 22556

20744, 20490
 Sanyo 20670
 Schneider 20646
 Semp 20503
 Semp Toshiba 20503
 Sensory 21158
 Science 20630, 22250, 20675
 Sharp 23052, 23837, 23925
 Sonic Blue 20869
 Sony 21516, 21633, 21033, 20864, 21070, 20772
 SV2000 20675
 Sylvania 20675
 Symphonic 20675
 TCL 22587
 Teac 20790
 Technics 20490, 20703
 Toshiba 23157, 22705, 20503, 23857, 22277, 22006, 21510, 21769, 21608, 22364

TruTech 20675
 Urban 20503
 Concepts 20790
 VENTURER 22563
 Vtrek 22587
 WB Electronics 22555
 Xbox 22083, 22627, 20522
 Yamaha 22298, 20497, 20539, 20545, 20490, 21354, 20646, 23837, 21416
 Zenith 20741, 20869, 20503

BLU-RAY DISC
 Curtis Mathes 22331, 23925
 Denon 22258, 22748
 Harman/Kardon 22927, 23228
 Insignia 22596, 22428, 20675
 Integra 22147
 JVC 22365, 22855
 Lexicon 22545
 LG 21602, 20741
 Magnavox 20675
 Marantz 22414, 23444
 Memorex 22331
 Microsoft 22627

Ölevia	22331
Onkyo	22147
Oppo	22545
Panasonic	21641, 23641
Philips	22434, 22084
Pioneer	22854, 22442, 20142
RCA	23464
Samsung	20199
Sharp	22250
Sherwood	23052, 23837, 23925
Sony	21516, 20772
Sylvania	20675
Toshiba	23157, 23857, 22705
VIZIO	22563
Xbox	22627
Yamaha	22298, 23837